

# Terranaut

OWNER'S MANUAL — Please read before using this equipment.

*Make the Terranaut walk, turn circles, and talk with your voice!*

Your RadioShack Terranaut moves and speaks like a real robot! You can have hours of fun making it march forward and turn in circles. Speak into the transmitter and watch the Terranaut's mouth move as it speaks with your voice.

## THE FCC WANTS YOU TO KNOW

Your Terranaut or transmitter might cause TV or radio interference even when it is operating properly. To determine whether your Terranaut or transmitter is causing the interference, turn off your Terranaut and transmitter. If the interference goes away, your Terranaut or transmitter is causing it.

Try to eliminate the interference by:

- moving your Terranaut and transmitter away from the TV or radio
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Terranaut.

## INSTALLING BATTERIES

**Warning:** Dispose of old batteries promptly and properly. Do not bury or burn them.

 
### Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or batteries of different capacities.
- Never leave dead or weak batteries in the robot or controllers.

**Note:** If you do not plan to play with the Terranaut for a week or more, remove the batteries.

### In the Terranaut

Your Terranaut requires four AA batteries (not supplied). For the best performance and longest life, we recommend RadioShack alkaline batteries.

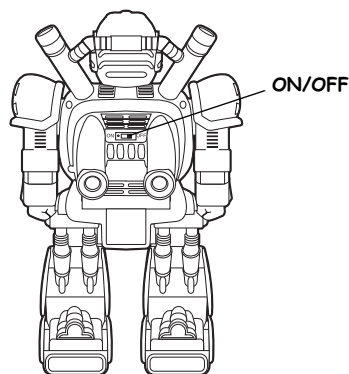


1. Slide ON/OFF to OFF.

**RadioShack**  
www.radioshack.com™

© 2000 RadioShack Corporation. All Rights Reserved.  
RadioShack and RadioShack.com are trademarks  
used by RadioShack Corporation.

 2. Use a Phillips screwdriver to loosen the screws on the battery compartment covers, then lift and remove the covers.

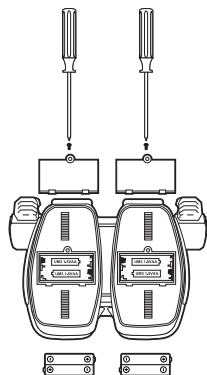


3. Install the batteries in the compartments as indicated by the polarity symbols (+ and -) marked inside.
4. Replace the covers and tighten the screws.

**Note:** Be sure to install batteries in both compartments.

When the Terranaut moves slowly or does not work properly, replace the batteries.

### In the Transmitter

 Your transmitter requires one 9V battery (not supplied). For the best performance and longest life, we recommend a RadioShack alkaline battery.

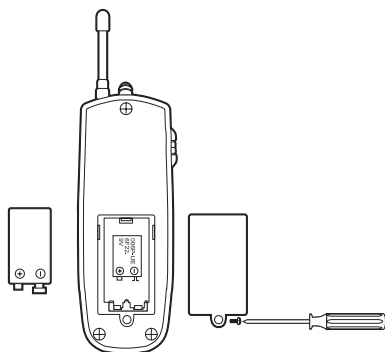


1. Use a Phillips screwdriver to loosen the screw on the battery compartment cover, then lift and remove the cover.
2. Install the battery in the compartment as indicated by the polarity symbols (+ and -) marked inside.
3. Replace the cover and tighten the screw.

When the transmitter's range decreases, replace the battery.

## MOVING THE TERRANAUT

 **Warning:** Never play with your Terranaut in the street.

1. Slide ON/OFF on the Terranaut to ON.
2. Slide OFF/ON on the transmitter to ON.
3. The Terranaut's transmitter has two motion control buttons. Hold down the left button to make the Terranaut march forward. Hold down the right button to turn the Terranaut in circles.

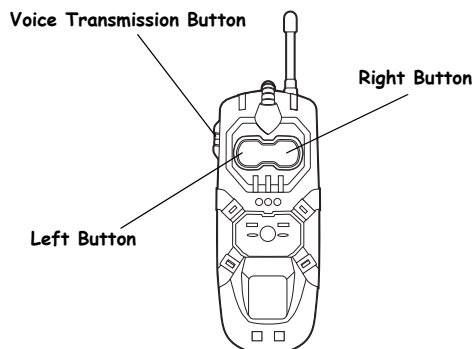

**Caution:** If your Terranaut gets stuck under an object, hold down the right button to rotate the Terranaut, then hold down the left button to move it forward.

4. When you finish playing with the Terranaut, slide ON/OFF on the Terranaut and OFF/ON on the transmitter to OFF.

**Note:** To prevent interference, keep the Terranaut away from the transmitter.

## TRANSMITTING YOUR VOICE

Hold down the voice transmission button on the left side of the transmitter, then speak into the microphone in a normal voice. The Terranaut's face lights and its mouth moves while your voice is transmitting.

## CARE

 
To enjoy your Terranaut for years:

- Keep the Terranaut and transmitter dry.
- Use and store the Terranaut and transmitter only in normal temperature environments.
- Handle the Terranaut and transmitter gently and carefully.
- Keep the Terranaut and transmitter away from dust and dirt.
- Wipe the Terranaut and transmitter with a damp cloth occasionally to keep them looking new.

Modifying or tampering with the Terranaut and transmitter's internal components can cause a malfunction and might invalidate its warranty. If the robot or controller does not perform as it should, take both sets to your local RadioShack store for assistance.

## USER-REPLACEABLE PARTS

You can order replacement parts for your robot at your local RadioShack store. Simply identify the part(s) you need from the exploded view, then find the part number.

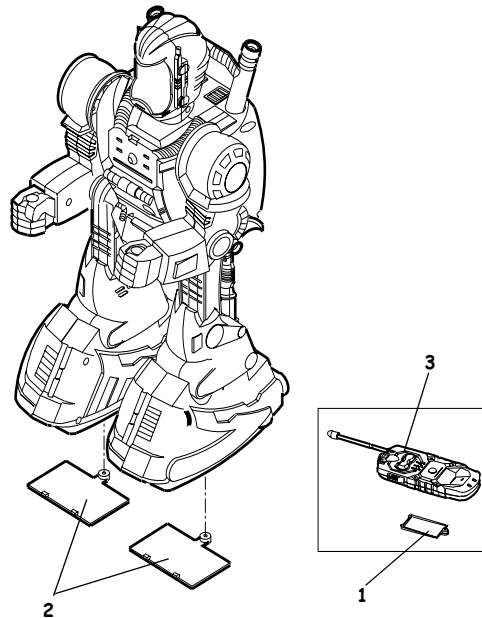

## User-Replaceable Parts List

Ref No.	Description	RSU No.
1	Transmitter Battery Lid	12261392
2	Receiver Battery Lid	12261400
3	Transmitter	12261749
*	Owner's Manual	12261517
*	Service Manual	12261467

\* Not pictured.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99

RadioShack Corporation  
Fort Worth, Texas 76102

60-4253  
06A00  
Printed in China